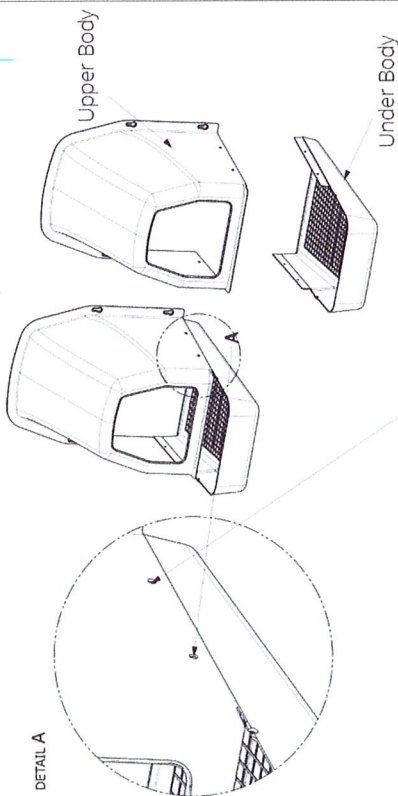
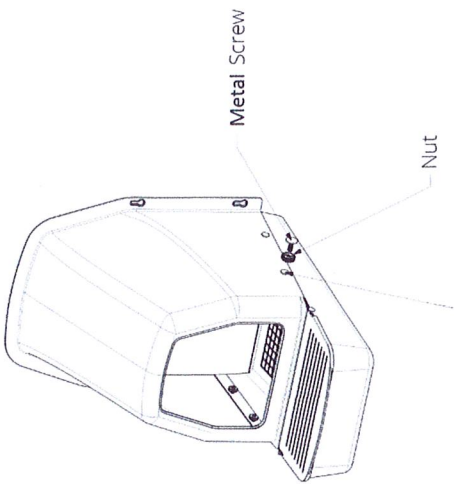
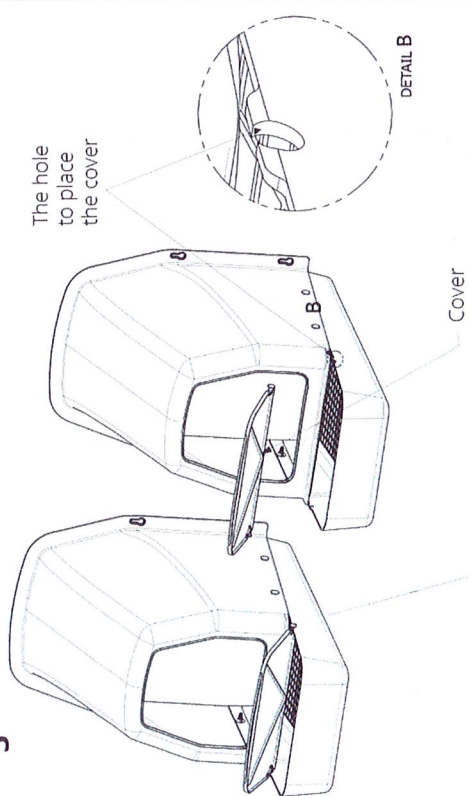
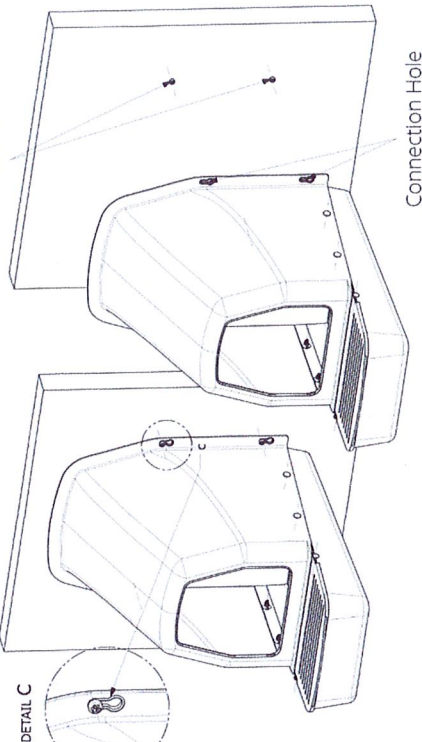


1 DETAIL A  Upper Body Under Body	2  Metal Screw Nut
Align the holes of the under and upper body like shown on the picture.	Use the metal screw to connection the under body and upper body.

3  The hole to place the cover DETAIL B Cover	4  DETAIL C Connection Screw Connection Hole
Push the cover on place like shown on the picture	Insert the connection hole into the connecting screw and push it down slightly